Ri4Power accessories

Switch-disconnector-fuse section

Divider panel

for switch-disconnector-fuse section

The divider panel is required for interior configuration of the switch-disconnector-fuse section, and divides the connection space from the functional space. Depending on the chosen position of the main busbar system, the divider panel is fitted in the prepared switch-disconnector-fuse enclosures

The prepared cut-outs are suitable for the connection of Jean Müller Sasil and ABB SlimLine switch-disconnector fuses.

Material:

Sheet steel, zinc-plated, passivated, 1.5 mm

Supply includes:

Assembly parts.

For main busbar system in the roof section

For enclosure height mm	For enclosure depth mm	Packs of	Model No. SV
2000	600	1	9674.306
2000	800	1	9674.308
2200	600	1	9674.326
2200	800	1	9674.328

For main busbar system in the rear section, top or bottom

For enclosure height mm	For enclosure depth mm	Packs of	Model No. SV
2000	600	1	9674.305
2000	800	1	9674.307
2200	600	1	9674.325
2200	800	1	9674.327





Dividing plate

for switch-disconnector-fuse section

Dividing plate to divide the busbar chamber and NH switch-disconnector-fuse chamber (compartment).

Material:

Sheet steel, zinc-plated, passivated, 1.5 mm

Supply includes:

Assembly parts.

For switch-disconnector-fuse brand	Mounting position	Packs of	Model No. SV
Jean Müller SASIL	top/bottom	1	9674.346
ABB SlimLine	top/bottom	1	9674.348

V

Also required:

Assembly kit for switch-disconnector-fuse section, see page 354.





Contact hazard protection cover

for switch-disconnector-fuse section (cable chamber)

The contact hazard protection cover plate shields the main busbar in the cable chamber, enabling the safe connection of cables and lines. Suitable for Maxi-PLS and Flat-PLS busbar systems.

Material:

Sheet steel, zinc-plated, passivated, 1.5 mm

Supply includes:

Assembly parts.

For main busbar system in the roof section

For enclosure width mm	For enclosure depth mm	Packs of	Model No. SV
1000	600	1 set	9674.362
1000	800	1 set	9674.364
1200	600	1 set	9674.366
1200	800	1 set	9674.368
	width mm 1000 1000 1200	width mm depth mm 1000 600 1000 800 1200 600	width mm depth mm Packs of 1000 600 1 set 1000 800 1 set 1200 600 1 set

For main busbar system in the rear section, top or bottom

	=		
	For enclosure width mm	Packs of	Model No. SV
	1000	1 set	9674.372
Ī	1200	1 set	9674.376



Also required:

Divider panel for switch-disconnector-fuse section,

see page 355



