

ISV distribution enclosures

Mounting kits



Installation kit

for TS

For mounting ISV installation modules in TS enclosures.

Supply includes:

- Mounting aid support
- Contact hazard protection
- Assembly parts



Accessories:

- Cross rail, see page 387
- Mounting angle, see page 387
- Depth stay, see page 387
- Equipment support connectors, see page 387

For enclosure width mm	600	600	850	1100
For enclosure height mm	1800	2000	2000	2000
For enclosure depth mm	400 500 600	400 600	400 600	400 600
To fit Model No.	8457.600/8684.500/ 8685.500/8686.500	8452.600/8604.500/ 8606.500	9666.915/9666.955	9666.925/9666.965
Width units (WU) @ 250 mm	2	2	3	4
Height units (U) @ 150 mm	11	12	12	12
Note on Model No.	Mounting angle 9666.711 additionally required	Mounting angle 9666.712 additionally required	Mounting angle 9666.712 additionally required	Mounting angle 9666.712 and depth stay 9666.731 additionally required
Packs of	1 pc(s).	1 pc(s).	1 pc(s).	1 pc(s).
Model No.	9666.931	9666.901	9666.911	9666.921

Installation kit

for AE

For mounting ISV installation modules in AE enclosures.

Supply includes:

- Assembly kit
- Support rails
- Contact hazard protection
- Assembly parts



Accessories:

- Mounting angle, see page 387

For enclosure width mm	380	500	600	600	600	1000
For enclosure height mm	600	700	760	1000	1200	1200
For enclosure depth mm	210	250	210	250	300	300
To fit Model No.	1008.600/ 1038.500	1057.500	1012.600/ 1076.500	1090.500	1260.500	1019.500/ 1019.600/ 1213.500
Width units (WU) @ 250 mm	1	1	2	2	2	3
Height units (U) @ 150 mm	3	4	4	6	7	7
Packs of	1 pc(s).	1 pc(s).	1 pc(s).	1 pc(s).	1 pc(s).	1 pc(s).
Model No.	9666.801	9666.811	9666.821	9666.831	9666.841	9666.851

